

## Adjusting the Auto Close

### Setting Auto-Close Time

**CLOSE TIME** (auto close timer): Determines how long the gate will remain open before it automatically closes. The limits are **OFF** and **3 - 120** seconds. The factory setting is **OFF**.

**NOTE:** *Auto-Close timer is disabled (gate will not automatically close) if gate is not in the open limit.*

