

## **1000 Blowing Fuses**

The fuse blows because the motor gets into a bind or strain. The motor pulls more and more current from the battery attempting to do its work until the fuse blows.

If you have a 1000 series, take the arm off the gate and operate it without a load. If it operates properly without blowing fuses while disconnected from the gate, the problem is with the gate.

Check the open position limit by checking the adjustment of the gate bracket in the middle of the gate. Check the closed position limit and if necessary, reset it using the knob underneath the operator arm. Also check for something on or about the gate out of level, out of plumb, binding, pinching, dragging, etc. Make sure that your hinges and pivot points are well lubricated.