

Adjusting the Auto Close

Setting Auto-Close Time

CLOSE TIME (auto close timer): Determines how long the gate will remain open before it automatically closes. The limits are OFF to 120 seconds. The factory setting is OFF.

