

Disconnecting the Operator Arm from the Gate

To remove the arm from a gate that does not have pin locks, follow these instructions:


To Manually Open and Close the Gate, Follow the Procedure Below:

⚠ CAUTION: The gate will move freely and uncontrolled when the gate opener is removed from the gate. **ONLY** disconnect the opener when the control box power switch is **OFF** and the gate is **NOT** moving.

Disconnecting the Opener

1. Turn control box power switch **OFF**.
2. Remove hairpin clip, clevis pin, and bushing from either the front or rear mounting point.
3. Remove the opener from the mount.

The gate can be opened and closed manually when the opener is disconnected.

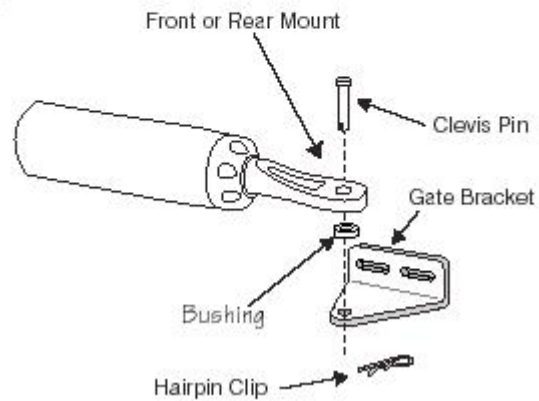

If you have pin locks, follow these instructions:

To Manually Open and Close the Gate, Follow the Procedure Below:

⚠ CAUTION: The gate will move freely and uncontrolled when the gate opener is removed from the gate. **ONLY** disconnect the opener when the control box power switch is **OFF** and the gate is **NOT** moving.

Disconnecting the Opener

1. Turn the control box power switch **OFF**.
2. Remove the pin lock from the front mount with the key that came with it.
3. Remove the hairpin clip, clevis pin, and bushing from the rear mount.
4. Remove the opener from the gate.

The gate can be opened and closed manually when the opener is disconnected.

