 
 


362-D Blowing Fuses

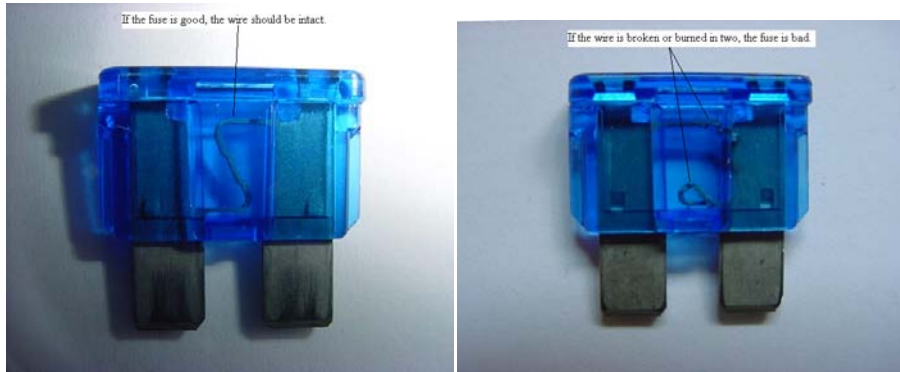

Check the battery harness for any damage to the installation (cuts, burns, pinched wires)

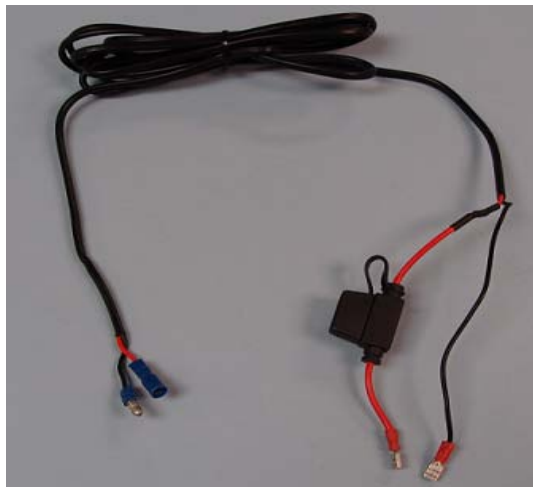

If the battery harness looks intact, replace the fuse and turn the system on. If the fuse blows again then the system would need to be sent in for evaluation. Also check for something on or about the gate out of level, out of plumb, binding, pinching, dragging, etc. Also make sure that your hinges and pivot points are well lubricated.

For the Mighty Mule® to work properly, gate must be plumb, level, set in concrete, swing freely and not touch the ground and have good working hinges.

