


362-D First Operator Position Sensor Error – Open Circuit

If you hear 1 beep every 2 seconds repeatedly and your gate opener will not work, then it indicates that the first operator arm or cable has an open circuit to the position sensor.

Inspect the power cable between the operator arm and the control box. Make sure that the cable hasn't been damaged.

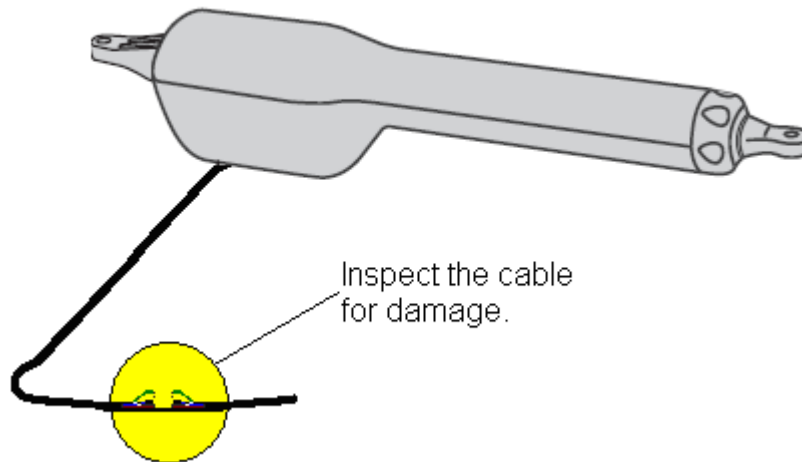

If the cable hasn't been damaged, then remove the first and second operator's wires and install the secondary arm wires into the first operator's terminal.

Turn the system ON and if you still get 1 beep every 2 seconds the problem is with the main circuit board and the board would need to be replaced. If the secondary arm works in the first operator's terminal then the problem is in the first operator's arm and the arm would need to be replaced.