


## 362-D First Operator Position Sensor Error – Short Circuit

If you hear 3 beeps every 2 seconds repeatedly and your gate opener will not work, then it indicates that the first operator arm or cable has a short circuit to the position sensor.

Inspect the power cable between the operator arm and the control box. Make sure that the cable hasn't been damaged.

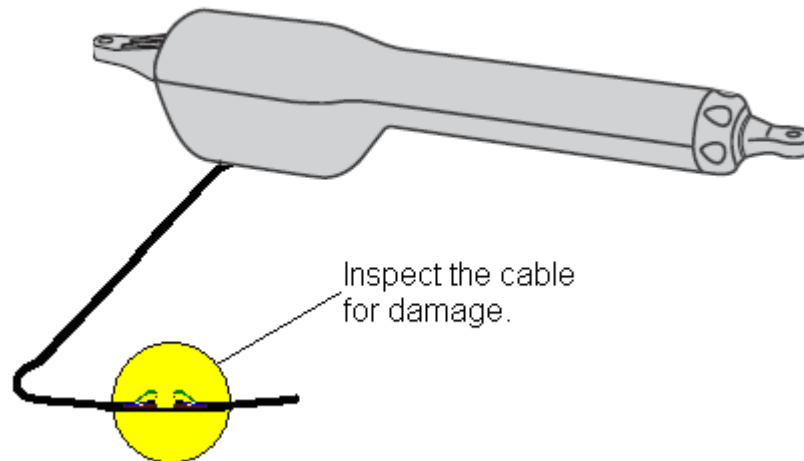

If the cable hasn't been damaged, then remove the first and second operator's wires and install the secondary arm wires into the first operator's terminal.

Turn the system ON and if you still get 3 beeps every 2 seconds the problem is with the main circuit board and the board would need to be replaced. If the secondary arm works in the first operator's terminal then the problem may be with the first operator's arm and the arm would need to be replaced.