


## Stall Force Adjustment

To set the Stall Force for a Mighty Mule 362-D:

- 1) Locate the Stall Force potentiometer on the main control board.

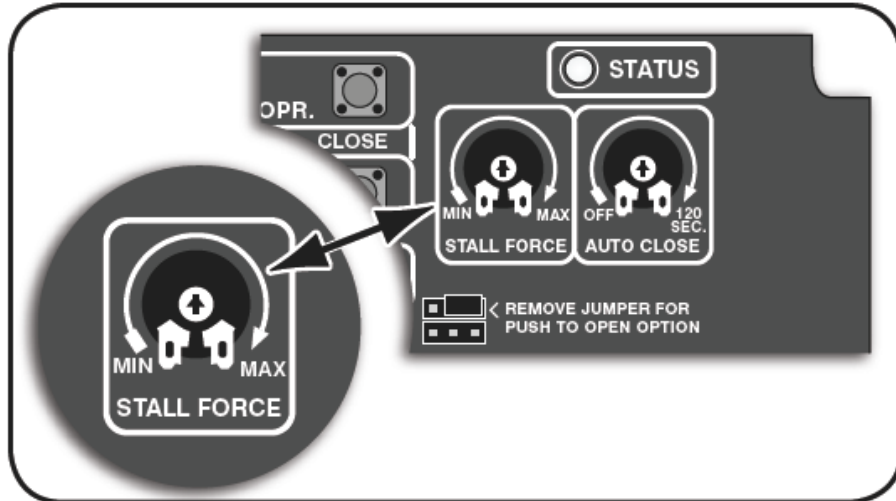

- 2) The Stall Force is normally set on the minimum setting from the factory. You will usually have to readjust this feature to get your gate opener to work correctly.
- 3) If your gate operator attempts to open or close and obstructs or reverses itself a couple of seconds, take a small flat head screw driver and turn the potentiometer clockwise to the right a couple of increments.



- 4) If the gate is still obstructing, increase the Stall Force potentiometer again. It will be trial and error to see exactly where this needs to be set. Safety is important so do not just turn the Stall Force to maximum to make the process quicker.
- 5) Adjust the Stall Force so the gate will operate without obstructing from its own weight or the wind conditions in your area.
- 6) You may need to increase the Stall Force in cold weather due to increased resistance from the gate hinges.