


SL1000 Auto Close

POTENTIOMETERS

The three (3) potentiometers on the control board operate like a volume control on a radio. They control the auto close timer, inertia, and obstruction sensitivity of the operator.

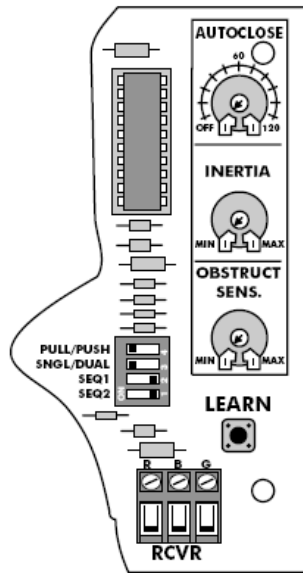

AUTO CLOSE (auto close timer): Determines how long the gate will remain open before it automatically closes. The limits are **OFF** to 120 seconds. The factory setting is **OFF**. Use a small slotted screwdriver to turn the arrow in the center of the potentiometer. Clockwise rotation increases the time (**MAX**). Counterclockwise rotation decreases the time (**MIN**).

NOTE: To change the potentiometers, you must turn the control box power switch **OFF**; Use a small screwdriver to move the arrow in the center; then turn the power back **ON**.