

Wiring the Universal Receiver for use with the Wireless Wand

- Disconnect the Antenna Receiver that came with the operator

